RONIS®

Operating Instructions

TRONIC +

Operating Instructions

Single User Mode:

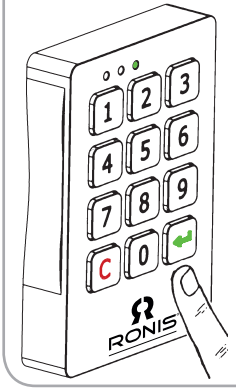

To Open:
Enter the 4 digit code. Default: 1111 and press Enter. The lock is open.

To Close:
The latch closes automatically after 2 seconds (Slam Door Function)

Multi User Mode:

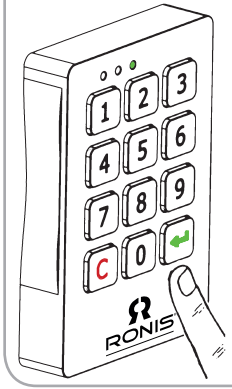

To Open:
Enter a 4 digit code. The code is erased every time the lock is opened.
After 3 error attempts the system locks out and blocks any access for 30 seconds.

To Close:
Enter a 4 digit code.

Change the User Code:

Hold for 3 secs | Input the current User Code and press Enter. Default: 1111 | Input the new User Code and press Enter.

Change the Master Code:

Hold for 3 secs | Input the current Master Code and press Enter. Default: 98765 | Input the new Master Code and press Enter.

Open using Master Code:

Less than 30 seconds: Inspection Mode

More than 30 seconds: User Code Deleted



Inspection Mode:
Input Master Code and press Enter. Press Enter to close lock within 30 seconds.
The User Code is not deleted (Multi User Mode).

Delete User Code - Multi User Mode:
Input Master Code and press Enter. After 30 seconds the lock remains open. The User Code has been deleted and a new User Code is required.

E-LOCK +

Operating Instructions

RONIS

Single User Mode:

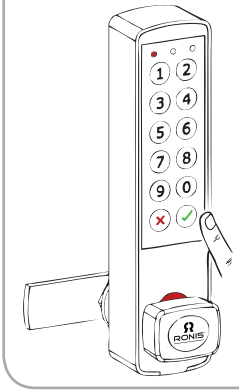

To Open:
Enter the 4 digit code. Default: 1111 and press Enter. The lock is open.

To Close:
Press Enter then turn the knob manually.

Multi User Mode:

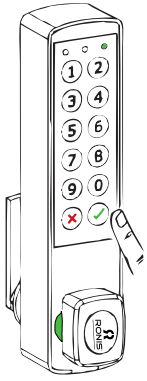

To Open:
Enter a 4 digit code. The lock opens automatically. The code is erased every time the lock is opened. After 3 error attempts the system locks out and blocks any access for 30 seconds.

To Close:
Enter a 4 digit code and turn the knob manually

Change the User Code:

Hold for 3 secs | Input the current User Code and press Enter. Default: 1111 | Input the new User Code and press Enter.

Change the Master Code:

Hold for 3 secs | Input the current Master Code and press Enter. Default: 98765 | Input the new Master Code and press Enter.

Open using Master Code:

Less than 30 seconds: Inspection Mode	More than 30 seconds: User Code Deleted



Inspection Mode:
Input Master Code and press Enter. Press Enter to close lock within 30 seconds.
The User Code is not deleted (Multi User Mode).

Delete User Code - Multi User Mode:
Input Master Code and press Enter. After 30 seconds the lock remains open. The User Code has been deleted and a new User Code is required.

TRONIC EVOLUTION / PROFESSIONAL

Operating Instructions

Single User Mode:

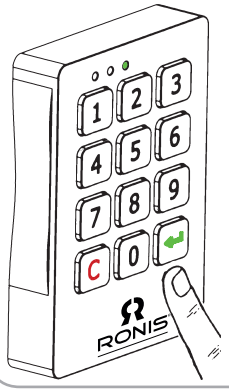

To Open:
Enter the 4 digit code. Default: 1111 and press Enter. The lock is open.

To Close:
The latch closes automatically after 2 seconds (Slam Door Function)

Multi User Mode:

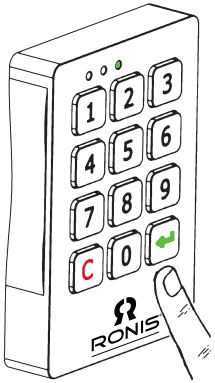

To Open:
Enter a 4 digit code. The code is erased every time the lock is opened.
After 3 error attempts the system locks out and blocks any access for 30 seconds. The time can be adjusted via the software.

To Close:
Enter a 4 digit code.

Change the User Code:

Hold for 3 secs | Input the current User Code and press Enter. Default: 1111 | Input the new User Code and press Enter.

Change the Master Code:

Hold for 3 secs | Input the current Master Code and press Enter. Default: 98765 | Input the new Master Code and press Enter.

Settings Key:

Load settings from the computer to the Settings Key (Black).

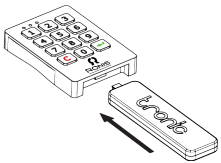

Connect the Key to the lock.
Settings automatically transferred.

Open using Master Code / Electronic Master Key:



Less than 30 seconds: Inspection Mode

More than 30 seconds: User Code Deleted

Inspection Mode:
Input Master Code (Insert Key) and press Enter. (Remove Key)
Press Enter to close lock within 30 seconds.
The User Code is not deleted (Multi User Mode).

Delete User Code - Multi User Mode:
Input Master Code (Insert Key) and press Enter. (Remove Key)
After 30 seconds the lock remains open.
User Code has been deleted and a new User Code is required.

E-LOCK PROFESSIONAL

Operating Instructions

RONIS

Single User Mode:

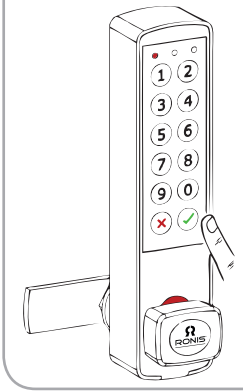

To Open:
Enter the 4 digit code. Default: 1111 and press Enter. The lock is open.

✱ ✱ ✱ ✱ ✓

To Close:
Press Enter then turn the knob manually.

✓

Multi User Mode:

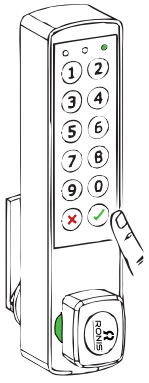

To Open:
Enter a 4 digit code. The code is erased every time the lock is opened.
After 3 error attempts the system locks out and blocks any access for 30 seconds. The time can be adjusted via the software.

✱ ✱ ✱ ✱ ✓

To Close:
Enter a 4 digit code and turn the knob manually

✱ ✱ ✱ ✱ ✓

Change the User Code:

✓ + ✱ ✱ ✱ ✱ ✓ + ✱ ✱ ✱ ✱ ✓

Hold for 3 secs | Input the current User Code and press Enter. Default: 1111 | Input the new User Code and press Enter.

Change the Master Code:

✓ + ✱ ✱ ✱ ✱ ✱ ✓ + ✱ ✱ ✱ ✱ ✱ ✓

Hold for 3 secs | Input the current Master Code and press Enter. Default: 98765 | Input the new Master Code and press Enter.

Settings Key:

Load settings from the computer to the Settings Key (Black).

+

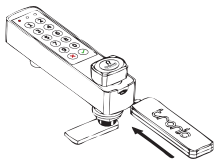

Connect the Key to the lock.
Settings automatically transferred.

Open using Master Code / Electronic Master Key:

✱ ✱ ✱ ✱ ✱ ✓

Less than 30 seconds: Inspection Mode

More than 30 seconds: User Code Deleted

Inspection Mode:
Input Master Code (Insert Key) and press Enter. (Remove Key)
Press Enter to close lock within 30 seconds.
The User Code is not deleted (Multi User Mode).

Delete User Code - Multi User Mode:
Input Master Code (Insert Key) and press Enter. (Remove Key)
After 30 seconds the lock remains open.
User Code has been deleted and a new User Code is required.

TRONIC MIFARE

Operating Instructions

Select Mode: Single User / Multi User

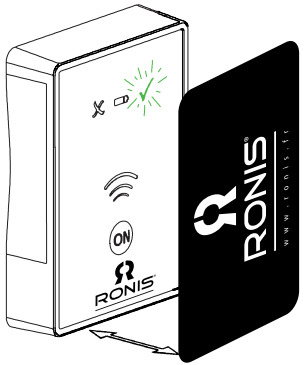

Single User Mode
Press On: Show the Management Card 3 times.
GREEN LED and 4 short beeps = Single User mode activated.

Multi User Mode
Press On: Show the Management Card 2 times.
GREEN LED and 2 short beeps = Multi User mode activated.

Create and Delete Master Cards

Create
Press On: Show the Management Card followed by the new Master Card. Up to 5 Master Cards can be created per lock.
GREEN LED and long beep = Master Card created successfully.
RED LED and 3 short beeps = Master Card creation failed.

Delete
Press On: Show the Management Card then the Master Card.
RED LED, 3 fast blinks and 3 short beeps = Master Card deleted.

Create and Delete User Cards: (Single User Mode)

Create
Press On: Show the Master Card followed by the new User Card. Up to 50 User Cards can be created per lock.
GREEN LED and long beep = User Card created successfully.
RED LED and 3 short beeps = User Card creation failed.

Delete
Press On: Show the Master Card then the User Card.
RED LED, 3 fast blinks and 3 short beeps = User Card deleted.

Single User / Multi User: Open and Close

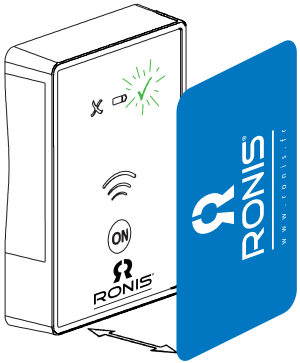

Single User Mode
Press On: Show the User Card.
After 2 seconds the lock closes automatically.
(Slam Door Function)

Multi User Mode
Press On: Show the User Card.

GREEN LED and 1 long beep = Correct Card
RED LED and 3 short beeps = Incorrect Card

TRONIC MIFARE

Operating Instructions

Open using Master Card: Inspection Mode / Delete User Card

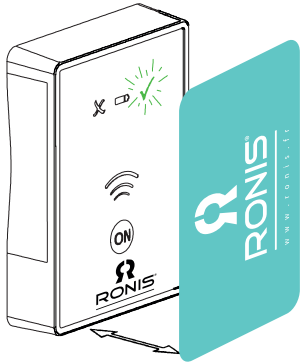

Inspection Mode:
Press On: Show the Master Card
GREEN LED and long beep = Lock opens for 30 seconds.

After 30 seconds time lock closes automatically. User Card is NOT deleted.

Delete User Card:
Press On: Show the Master Card (2 times).
GREEN LED and long beep = The lock remains open.

User Card has been deleted.

Delete All User Cards: (Single User Mode)

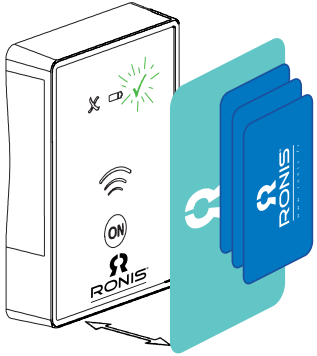

Press On: Show the Master Card (4 times).
All User Cards for this lock have now been deleted.

Settings Key:

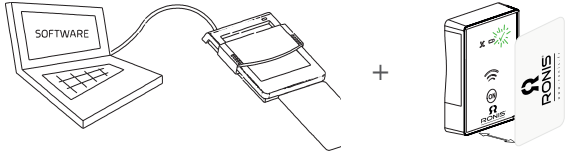

Load settings from the computer to the Settings Card.

Connect the Key to the lock. Settings automatically transferred.

Table Reader / Writer

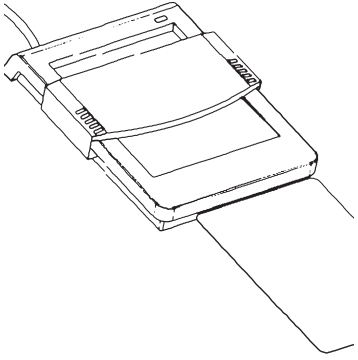

The use of the table reader allows management functions from a remote place (i.e. reception desk) such as:

- Create and delete Management / Master / User Cards
- Read relevant information from the Card
- Assign users to locks, limiting time of use
- Read last events of the locks
- Read all settings from the locks
- Create SETTINGS Cards to modify the parameters of the lock.

Cards and functions:

Management Card:
Single User / Multi User mode selection
Create and Delete Master Cards

Master Card:
Create and Delete User Cards (Single Users Only)
Inspection Mode and Delete User Cards

User Card:
Open and Close locks

Settings Card:
Transfer parameters from software to locks
Single User / Multi User modes
LED Signal
Acoustic Sound
Codes
Automatic Opening Time

TRONIC TOUCH

Operating Instructions

RONIS

Single User Mode:

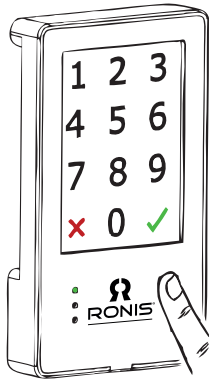

To Open:
Enter the 4 digit code. Default: 1111 and press Enter. The lock is open.

✱ ✱ ✱ ✱ ✓

To Close:
The latch closes automatically after 2 seconds (Slam Door Function)

Multi User Mode:

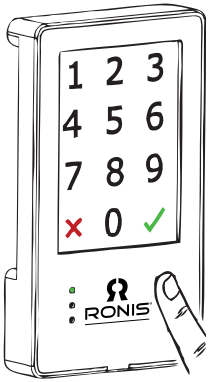

To Open:
Enter a 4 digit code. The code is erased every time the lock is opened.
After 3 error attempts the system locks out and blocks any access for 30 seconds. The time can be adjusted via the software.

✱ ✱ ✱ ✱ ✓

To Close:
Enter a 4 digit code.

✱ ✱ ✱ ✱ ✓

Change the User Code:

✓ + ✱ ✱ ✱ ✱ ✓ + ✱ ✱ ✱ ✱ ✓

Hold for 3 secs

Input the current User Code and press Enter. Default: 1111

Input the new User Code and press Enter.

Change the Master Code:

✓ + ✱ ✱ ✱ ✱ ✱ ✓ + ✱ ✱ ✱ ✱ ✱ ✓

Hold for 3 secs

Input the current Master Code and press Enter. Default: 98765

Input the new Master Code and press Enter.

Settings Key:

+

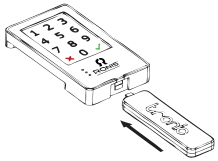

Load settings from the computer to the Settings Key (Black).

Connect the Key to the lock. Settings automatically transferred.

Open using Master Code / Electronic Master Key:

✱ ✱ ✱ ✱ ✱ ✓

Less than 30 seconds: Inspection Mode

More than 30 seconds: User Code Deleted

Inspection Mode:
Input Master Code (Insert Key) and press Enter. (Remove Key)
Press Enter to close lock within 30 seconds.
The User Code is not deleted (Multi User Mode).

Delete User Code - Multi User Mode:
Input Master Code (Insert Key) and press Enter. (Remove Key)
After 30 seconds the lock remains open.
User Code has been deleted and a new User Code is required.

K.T.S.

Operating Instructions

Single User Mode:

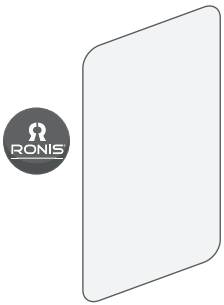

Access by transponder. The transponder code is fixed.

To Open:
Show the User Card to the lock.
1 beep = Lock Open.

To Close:
The latch closes automatically after 2 seconds (Slam Door Function).

Multi User Mode:

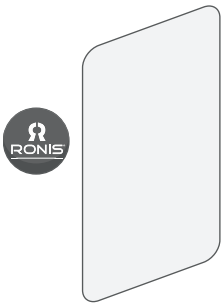

Access by transponder. The transponder code is erased every time the lock is opened, being available for a new user.

To Open:
Show the User Card to the lock.
1 beep = Lock Open.

To Close:
Show the card to the lock.
1 beep - Lock Closed.

User Cards: Add a New User Card / Delete Existing User Card

Add a New User Card:
Show the lock the Master Tag once and then show the Blank User Card.

Delete a User Card:
Show the lock the Master Tag once and then show the User Card you wish to delete.

Master Tag: Open / Reset

To Open:
Show the lock the Master Tag (2 times).

To Close:
The latch closes automatically after 2 seconds (Slam Door Function).

To Reset:
Show the lock the Master Tag (4 times).

Please note: After using the Reset Mode ALL User Cards will be erased.

MAINTENANCE

Battery Replacement

TRONIC RANGE Battery Replacement:

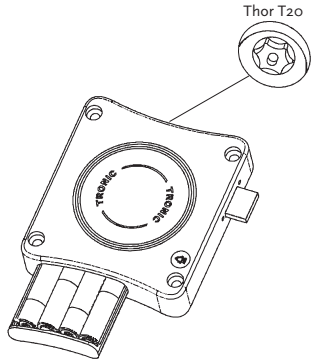

IMPORTANT:

When replacing the batteries, it must be done within 5 minutes (otherwise the clock will lose the programmed time).

For security reasons, you must change the default codes before using this product.

K.T.S. Battery Replacement:

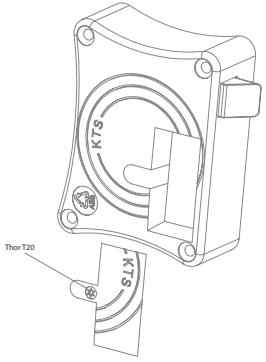

IMPORTANT:

When replacing the batteries, it must be done within 5 minutes (otherwise the clock will lose the programmed time).

For security reasons, you must change the default codes before using this product.

E-LOCK RANGE Battery Replacement:

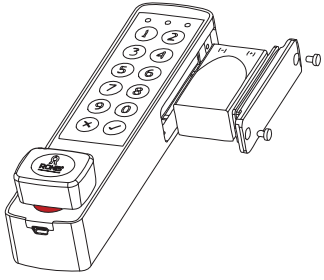

IMPORTANT:

When replacing the batteries, it must be done within 5 minutes (otherwise the clock will lose the programmed time).

For security reasons, you must change the default codes before using this product.

Battery Support Pack:

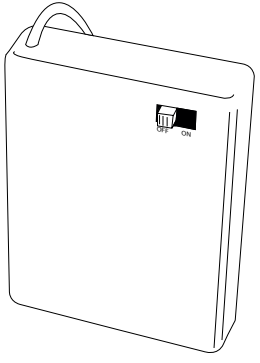

A battery support pack for emergencies to operate the TRONIC series.

In the same way that the Settings Key conencts to the locks, you simply insert the cable into the bottom of the lock.

This will provide enough charge to open the lock and change the battery.

DRILL TEMPLATE

TRONIC KEYPAD / RFID

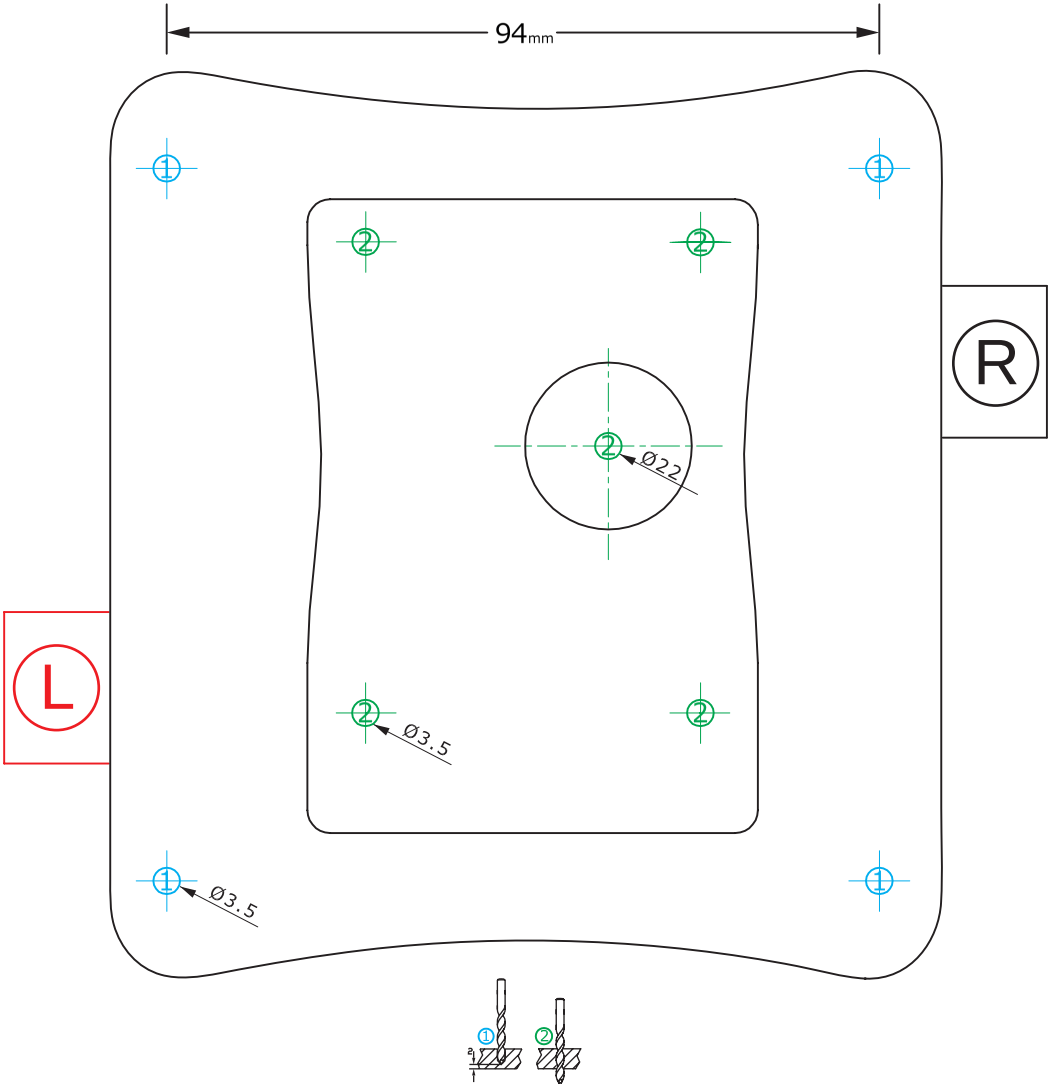

DRILL TEMPLATE

TRONIC TOUCH

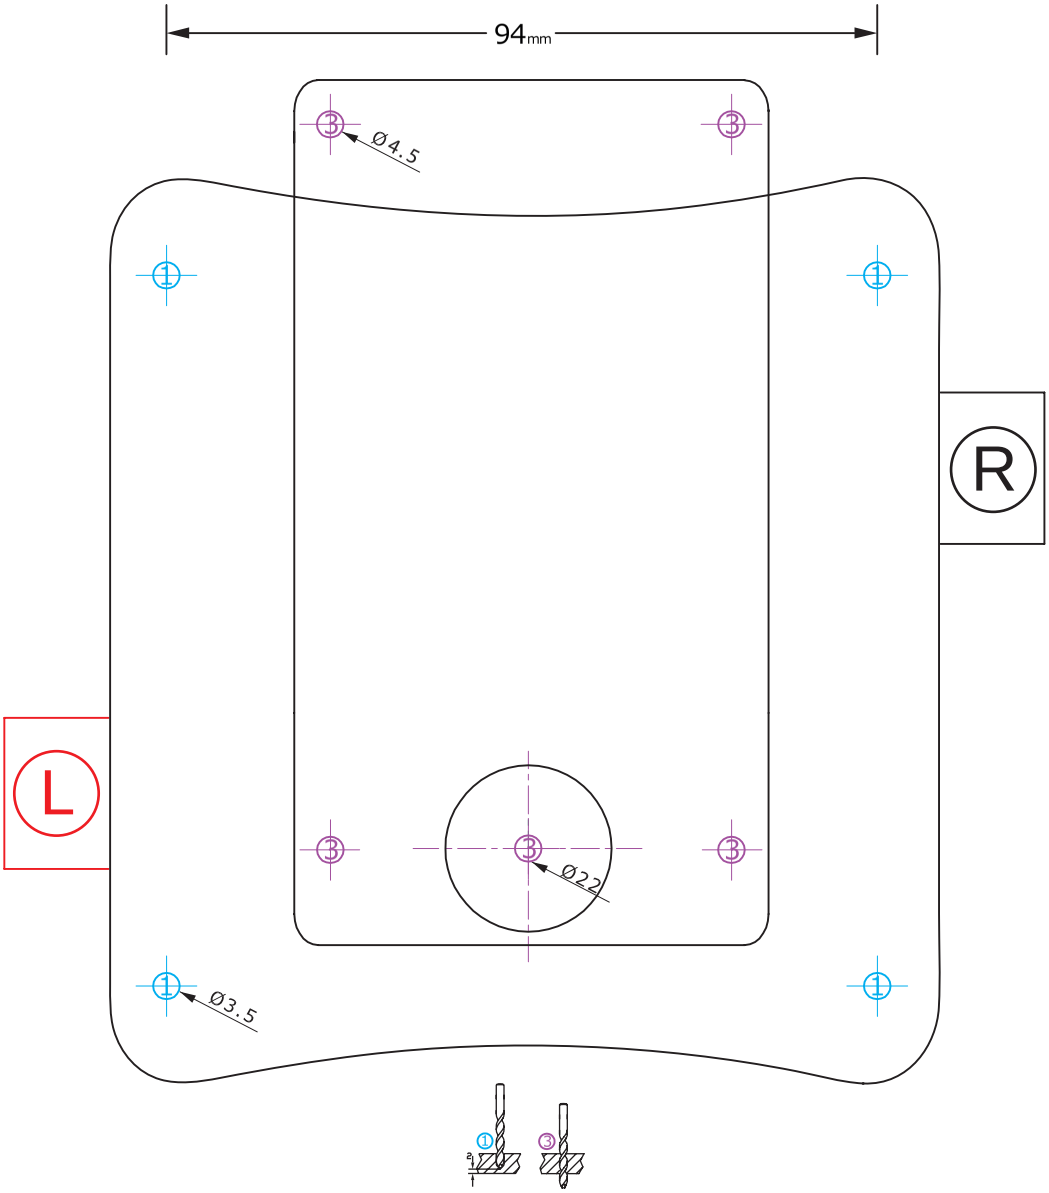

DRILL TEMPLATE

E-LOCK RANGE

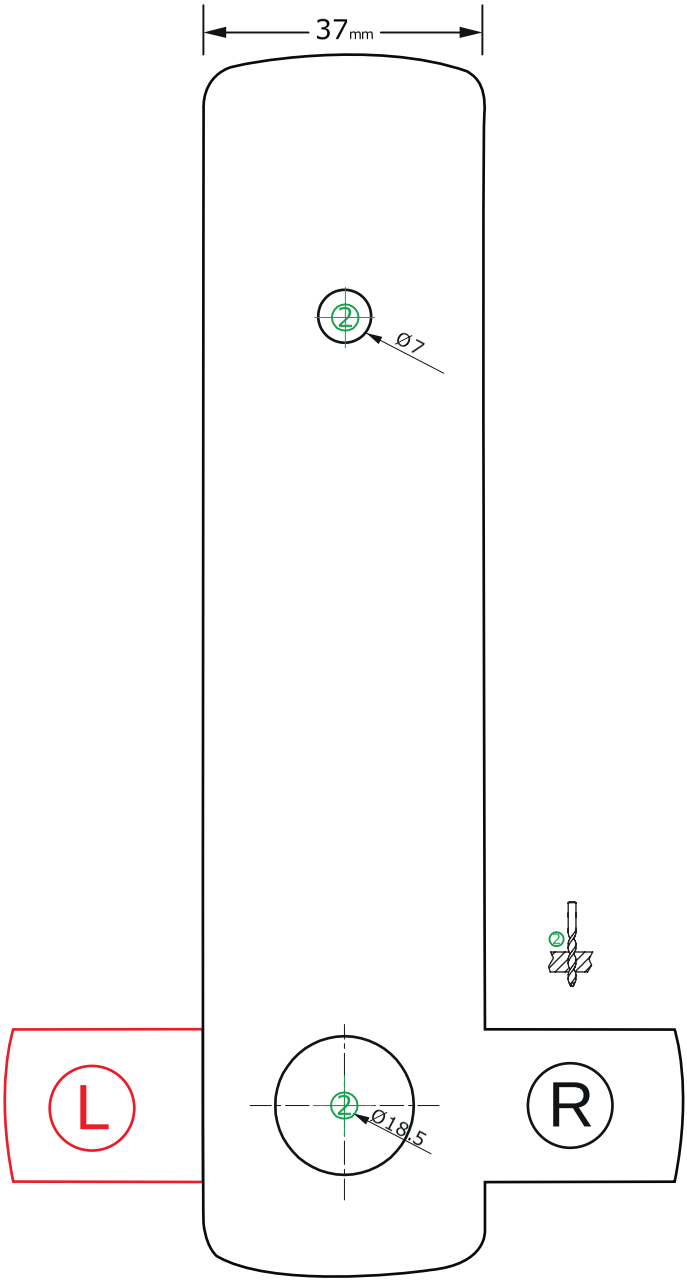

DRILL TEMPLATE

K.T.S.

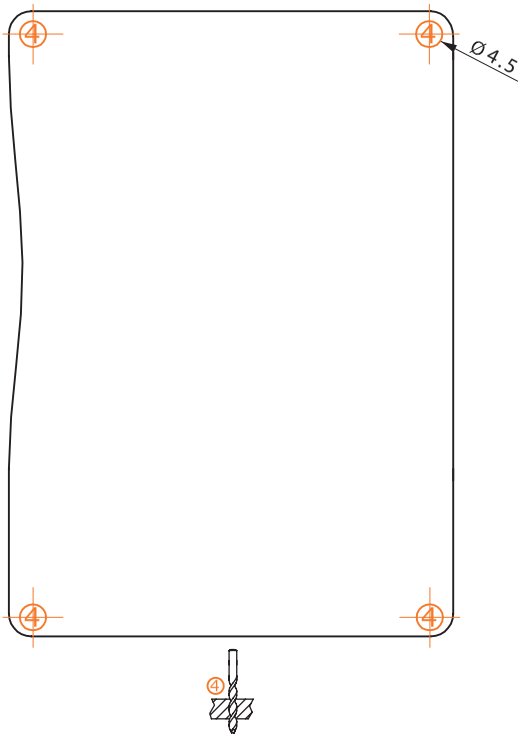

RONIS®

DOM Sicherheitstechnik
GmbH & Co. KG
Postfach 1949
DE-50309 Brühl
Tel. +49(0)22 32 - 704 0
Fax. +49(0)22 32 - 704 375
www.dom-sicherheitstechnik.com
dom@dom-sicherheitstechnik.com

DOM Sicherheitstechnik GmbH
Missindorfstraße 19-23
AT-1140 Wien
Tel. +43(0)1 - 7 89 73 77
Fax. +43(0)1 - 7 89 73 77 73
www.dom.at
office@dom.at

DOM AG Sicherheitstechnik
Breitenstrasse 11
CH-8852 Altendorf
Tel. +41(0)55 - 4 51 07 07
Fax. +41(0)55 - 4 51 07 01
www.dom-sicherheitstechnik.ch
dom.schweiz@dom-
sicherheitstechnik.ch

RONIS S.A.S.
Rue de Neuilly
FR-18600 SANCOINS
Tel. +33(0)24 87 45 000
Fax. +33(0)24 87 62 294
www.ronis.fr
contact@ronis.fr

RONIS-DOM Ltd.
Unit 1 Junction 2 Industrial Estate
Demuth Way, Oldbury
GB-Birmingham, B69 4 LT
Tel. +44(0)121 - 5 69 77 90
Fax. +44(0)121 - 5 69 77 98
www.ronis-dom.co.uk
sales@ronis-dom.co.uk

Securidev Hungary
Csepel U.3
HU-9400 Sopron
Tel. +36(0)99 514-125
Fax. +36(0)99 514 180
www.securidev.hu
info@securidev.hu

Titan D.D.
Kovinarska 28
SI-1241 Kamnik
Tel. +386(0)183 - 09 100
Fax. +386(0)183 - 09 200
www.titan.si
titan@titan.si

Hoberg.N.V.
Avenue Edison 27
B-1300 Wavre
Tel. +32(0)-10-232220
Fax. +32(0)-10-232239
www.hoberg.be
info@hoberg.be

Securidev Romania
B-Dul Petrolului
RO-NR.51C Ploiesti
Tel. +40(0)344 - 11 53 26
Fax. +40(0)344 - 11 53 26
www.securidev.ro
info@securidev.ro

DOM-Nederland
Tiber 32-34
NL-2491 DH Den Haag
Tel. +31(0)70 - 3 19 30 06
Fax. +31(0)70 - 3 99 69 03
www.dom-nederland.nl
info@dom-nederland.nl

C.R. SERRATURE S.P.A.
Via Regaldi 13
IT-10154, Torino
Tel. +39(0)11 - 2 48 23 20
Fax. +39(0)11 - 2 48 19 85
www.cr-serrature.com
info@crserrature.191.it

Securidev CZ spol.s.r.o.
U Pekarky 1a/484
CZ-180 00 Praha 8
Tel. +420(0)2 - 22 78 34 10
Fax. +420(0)2 - 22 78 30 06
www.secuirdev.cz
info@securidev.cz

SECURIDEV